

Remote Control User Guide

ThermoStretch® HT-7120

FRONT

POWER – Lights to indicate that master power switch is on.

WIDTH – Focus or diffuse massage pressure by selecting the wide, standard, or narrow roller setting. Select the width setting **AFTER** selecting a massage technique.

15-MINUTE AUTO PROGRAMS
– Choose from three auto massage programs, focusing on either the full, upper, or lower back.

RECLINE – Adjusts the backrest angle

STRETCH – Press the stretch button for up to 15 seconds to activate (the remote beeps when ready). The chair performs a gentle full-body stretch.

RESTORE – Press to bring the chair back into the upright starting position.


SESSION TIMER – Indicates the number of minutes remaining in the current 15-minute program.

FIVE MASSAGE TECHNIQUES – Each massage technique button toggles among auto (alternates speeds), high and low speeds.

RANGE – Press the range button to set the vertical massage range to the short, medium, or tall setting.

FOOT & CALF – Choose from auto massage, which alternates speeds, or select a high or low speed.


STOP/PARK – Stops the massage and parks the massage rollers at the top of the backrest.

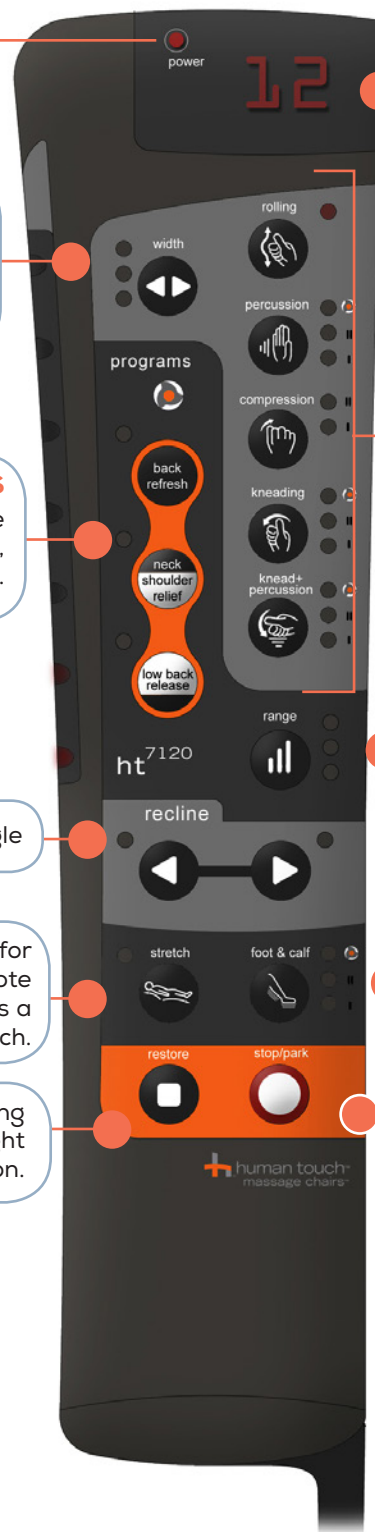

Remote Control User Guide

ThermoStretch® HT-7120

SIDE

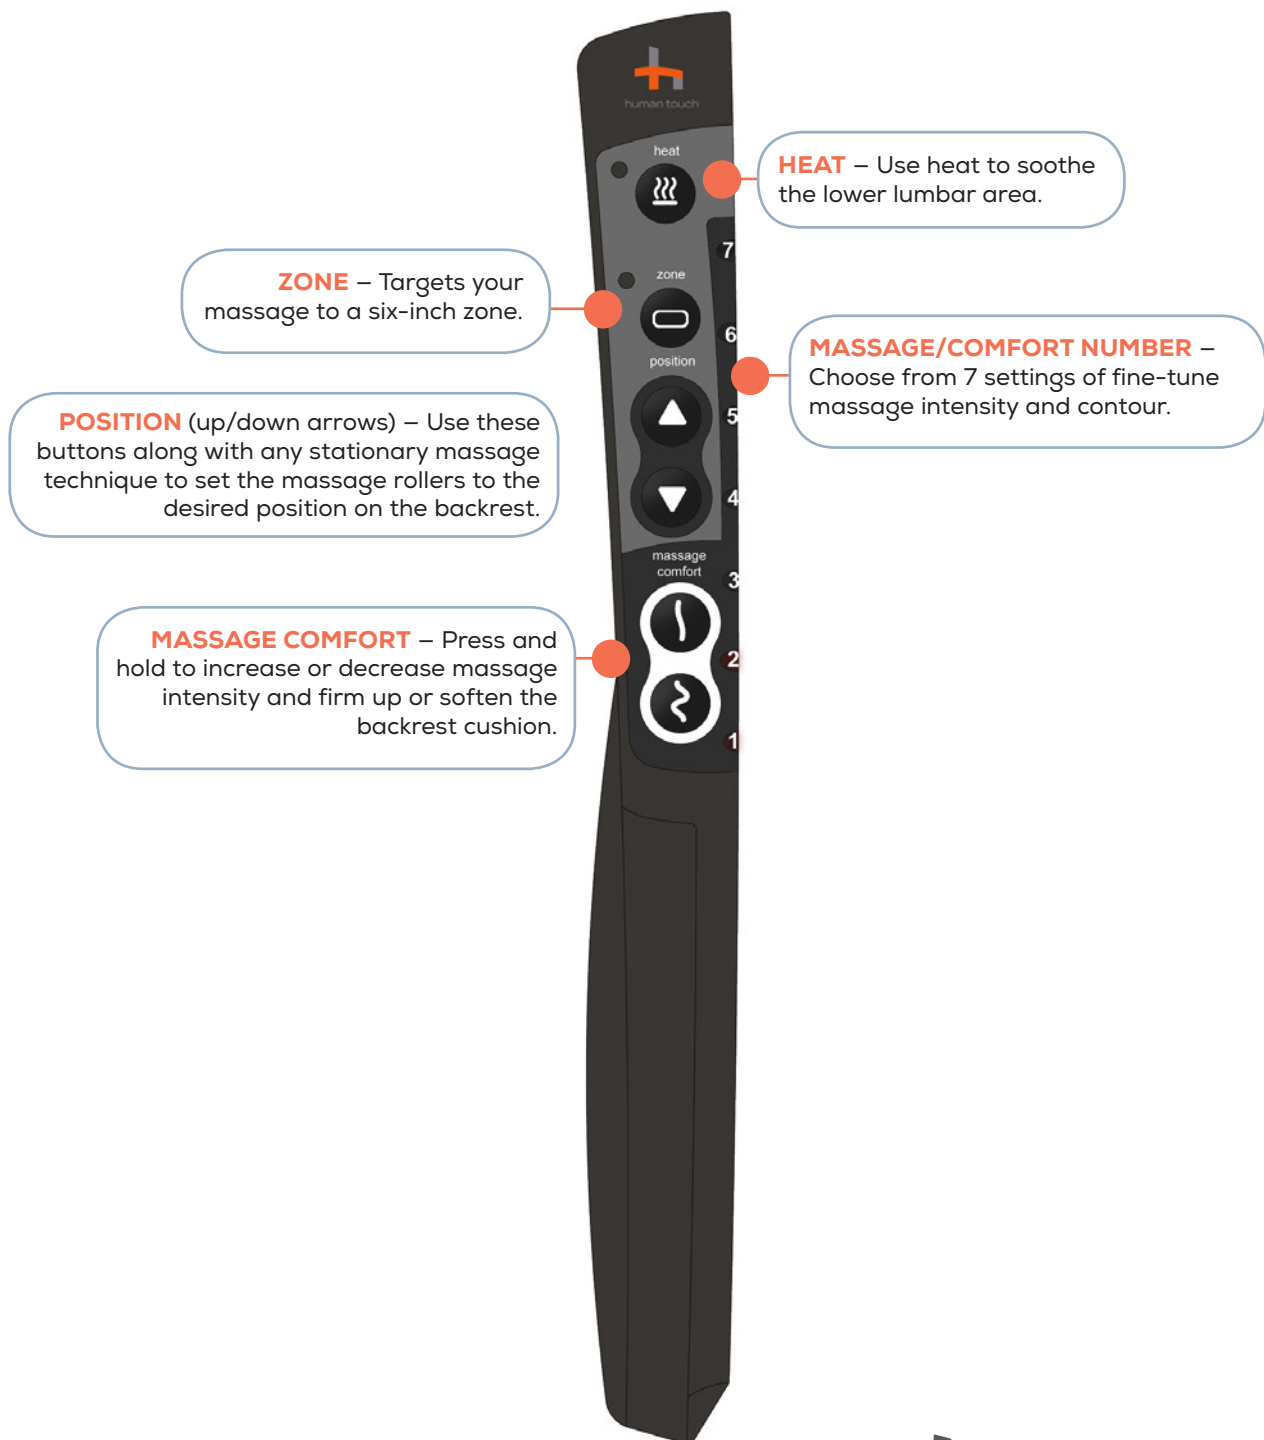

For more detailed operation instructions, please see the Use and Care Manual.