



REPLACING THE CONTROLLER

It is imperative that Human Touch[®] products are repaired in a manner that ensures product safety and regulatory compliance and that is fully consistent with the practices used during the manufacturing process. Therefore, Human Touch requires that all product repairs are performed using only factory-new parts and in accordance with these repair instructions. Failure to adhere to these instructions voids the product warranty and releases Human Touch from all liability for injury or product damage resulting from the repair.

SERVICE LEVEL: 2

Tools Required: Phillips-head screwdriver. **NOTE:** SAVE ALL SCREWS FOR USE DURING REASSEMBLY.

! CAUTION! You will need at least two people to complete this procedure, as the chair is very heavy. Be sure you have enough people to lift and move the chair, to prevent injury.

REMOVING THE REMOTE CONTROL

1. Locate the remote control cable at the bottom center of the backrest.
2. Remove the four screws that hold the remote control cable bracket in place, using a Phillips-head screwdriver (Fig.1).
3. Pull the bracket and cable out of the backrest until the connectors are visible.
4. Disconnect the connectors.

INSTALLING THE NEW REMOTE CONTROL

1. Connect the new remote control cable to the corresponding cable in the bottom center of the backrest, then push the cables into the back of the chair.
2. Reattach the cable bracket and secure it, using a Phillips-head screwdriver and the four screws you removed earlier.

