

REPLACING THE DAUGHTER BOARD

To ensure that Human Touch® products are repaired in a manner that is fully consistent with the practices used during the manufacturing process, Human Touch requires that all product repairs are performed using only factory-new parts and in accordance with these product repair instructions.

SERVICE LEVEL: 3

Tools Required: Phillips-head screwdriver

NOTE: SAVE ALL REMOVED PARTS FOR USE DURING REASSEMBLY



GET READY




Before you can replace the daughter board, you must remove the backrest cover. See Replacing the Backrest Cover (enclosed) for instructions.

REMOVING THE DAUGHTER BOARD

1. Using a Phillips-head screwdriver, remove the six screws from the white daughter board cover, then remove the cover (fig.1).
2. Disconnect each of the 11 connectors from the board.
3. Using a Phillips-head screwdriver, remove the screws from each of the four corners of the board, then remove the board from the backrest. (fig.2).
4. Place the new daughter board into position, then secure it using the four screws.
5. Reconnect the connectors, using Fig. 3 as a guide.
6. Replace the backrest cover. See Replacing the Backrest Cover for instructions.

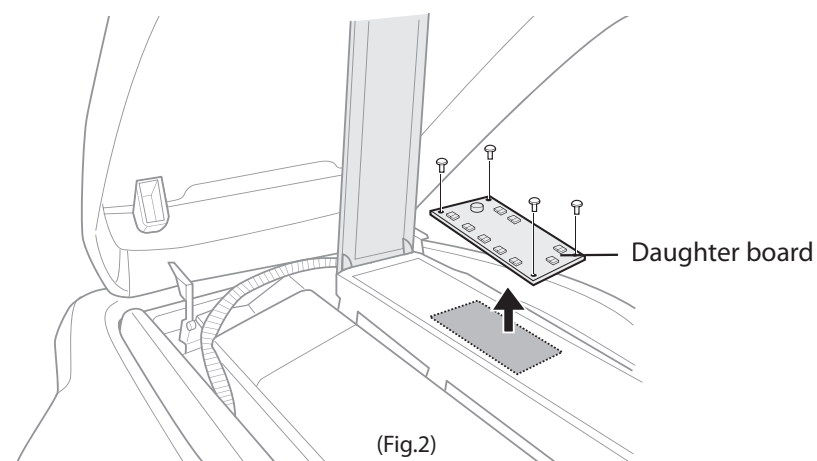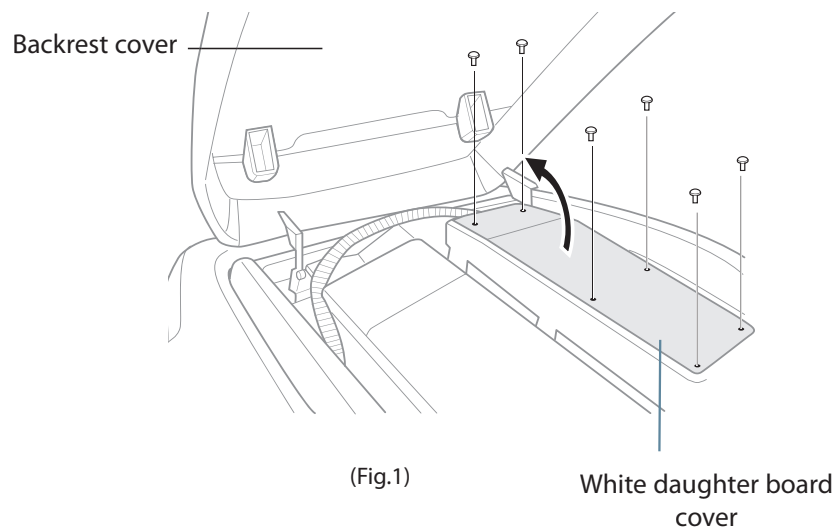

WARNING: IT IS IMPERATIVE THAT YOU RECONNECT THE CONNECTORS AS INDICATED IN FIG. 3; CONNECTING THEM IMPROPERLY WILL LIKELY DAMAGE THE CONTROL MODULE.

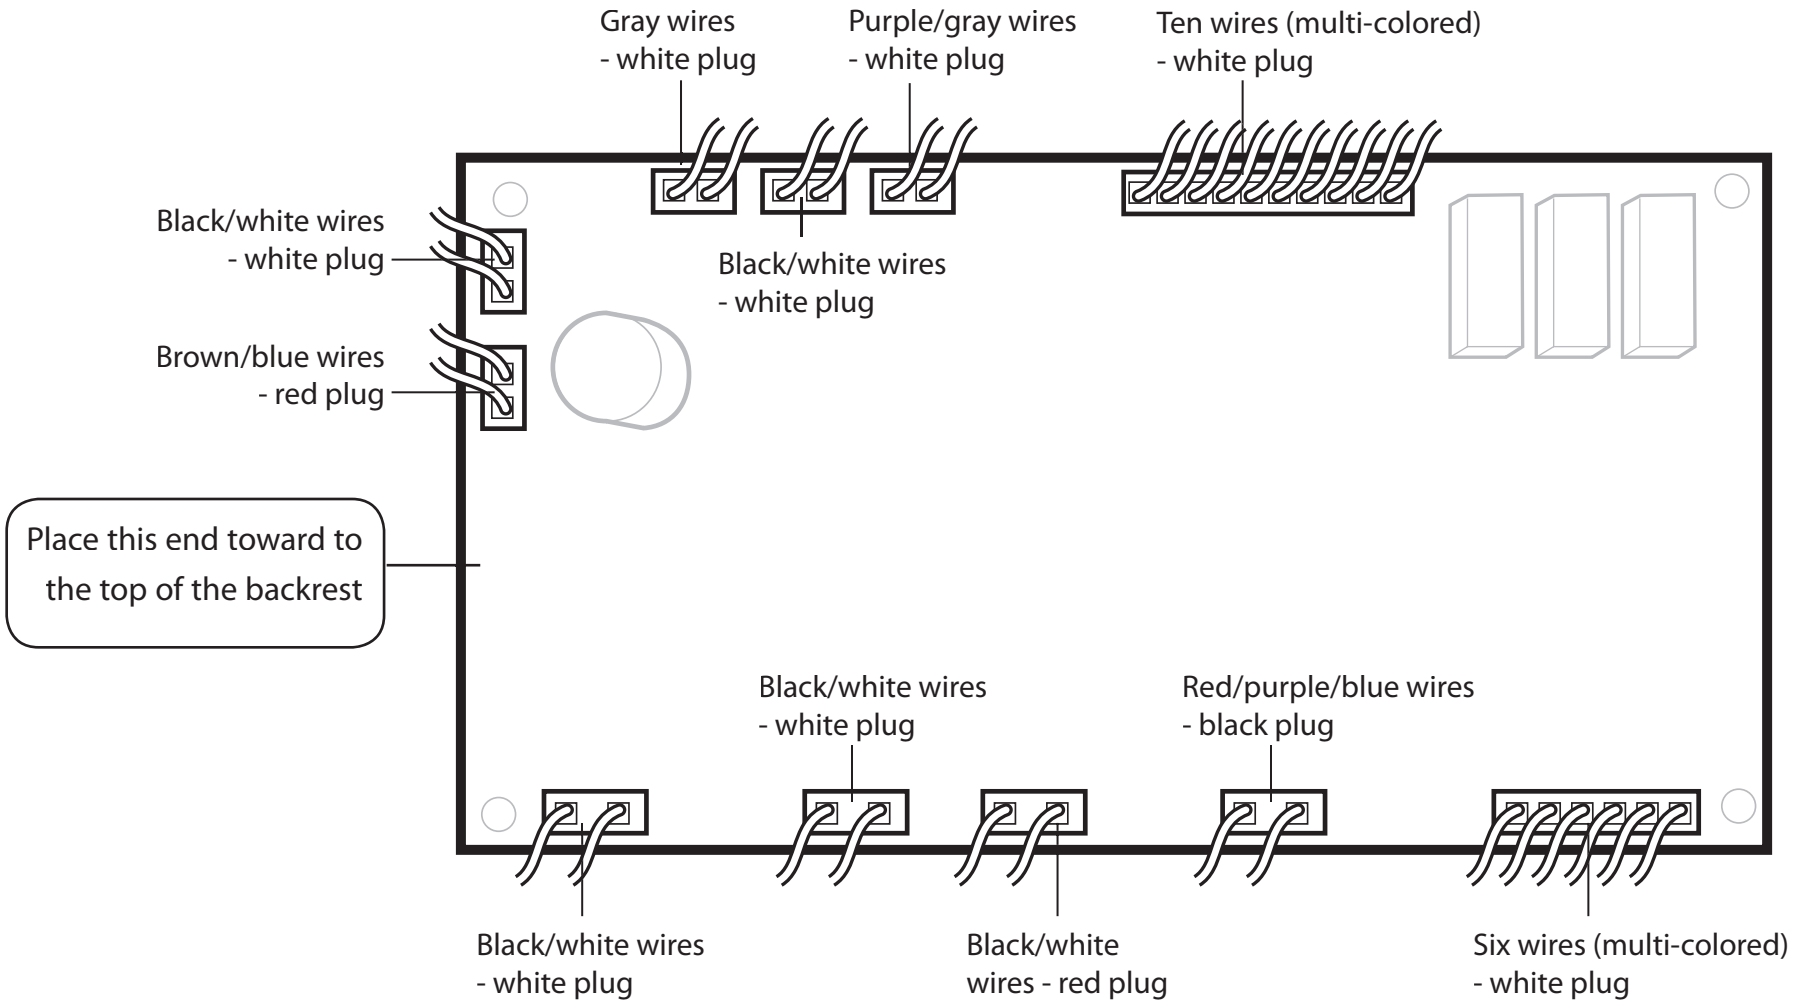

(Fig.3)