

REPLACING THE CONTROLLER


To ensure that Human Touch® products are repaired in a manner that is fully consistent with the practices used during the manufacturing process, Human Touch requires that all product repairs are performed using only factory-new parts and in accordance with these product repair instructions.

SERVICE LEVEL: 2

Tools Required: Phillips-head screwdriver, utility blade.

SAVE ALL REMOVED PARTS FOR USE DURING REASSEMBLY

REMOVING THE CONTROLLER

1. Power off the chair then unplug it. 
2. Using a utility blade, peel the label off the controller (Fig.1).
3. Using a Phillips-head screwdriver, remove the three screws that secure the controller to the chair (Fig.2).
4. Using a flat-head screwdriver, pry the outside edge of the controller up and out of the armrest, then pull the controller toward the outside of the chair to free it from the chair (there are tabs on the inside edge) (Fig.3).
5. Disconnect the connectors, then remove the controller from the chair.



(Fig.1)



(Fig.2)



(Fig.3)

