

Remote Control User Guide

AcuTouch® 6.1

POWER – Powers on the controller.

STOP – Press to immediately stop the massage.

MAIN MENU – Press to return to the Main Menu at any time.

NAVIGATION – Use the directional arrows to move the on-screen cursor to the desired screen option, then press Enter to select the option.

LEGS UP/DOWN – Press and hold to raise or lower the footrest.

BACK UP/DOWN – Press and hold to recline or incline the backrest.

RESTORE – For an easier exit, press and hold the restore button to retract the footrest and return the backrest to a full upright position before getting out of the chair.



For more detailed operation instructions, please see the Use and Care Manual.