

Remote Control User Guide

LITO

RECLINE LOCK INDICATOR: – Lights when maximum manual recline is locked; Press the **UNLOCK** button to unlock it.

MEMORY 1 / SET – To store the chair's current position settings, press and hold both **Memory 1** and **Set** buttons until the LED flashes three times.

MEMORY 2 / SET – To store the chair's current position settings, press and hold both **Memory 2** and **Set** buttons until the LED flashes three times.

BACKREST – Use these buttons to recline and incline the backrest.

ZG – Press to place the chair in zero gravity position, with your legs above your heart.

RESTORE – Press and hold to restore the chair to the upright position with footrest retracted.

FOOTREST – Use these buttons to deploy and retract the footrest.

READING – Press to place the chair in the preset Reading position.

TV – Press to place the chair in the preset TV position.

HEAT – Press to turn seat and backrest heat on/off. The heat automatically turns off after one hour.

NAP – Press to place the chair in the preset Nap position.

UNLOCK – Press to fully recline the backrest when using the manual backrest buttons.

MAX – Press and hold to fully recline the backrest and raise the footrest to maximum height.

