




## REPLACING THE FOOT AND CALF MASSAGER

To ensure that Human Touch® products are repaired in a manner that is fully consistent with the practices used during the manufacturing process, Human Touch requires that all product repairs are performed using only factory-new parts and in accordance with these product repair instructions.

SERVICE LEVEL: 3

Tools Required: Phillips-head screwdriver, needle-nosed pliers, black permanent marker.


SAVE ALL REMOVED PARTS FOR USE DURING REASSEMBLY

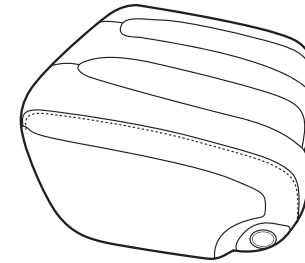


Foot and calf massager

### REMOVING THE FOOT AND CALF MASSAGER


1. Use the remote control to fully deploy the foot and calf massager, then power off the chair and unplug it.
2. Using a Phillips-head screwdriver, remove the screw from the right-hand foot and calf massager bracket cover, then remove the cover (Fig.1).
3. Disconnect the exposed connectors (Fig.2).
4. Using a permanent marker, mark the top of the exposed metal bushing. This will make reinstalling the bushing much easier (Fig.2).
5. Using a Phillips-head screwdriver, remove the three screws that secure the bushing, then remove the bushing. NOTE: You will need to pull the bushing firmly over the connector to free the bushing from the foot and calf massager (Fig.3).

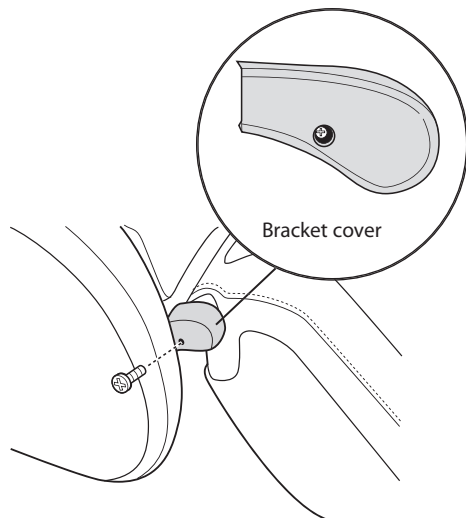

(Fig.1)

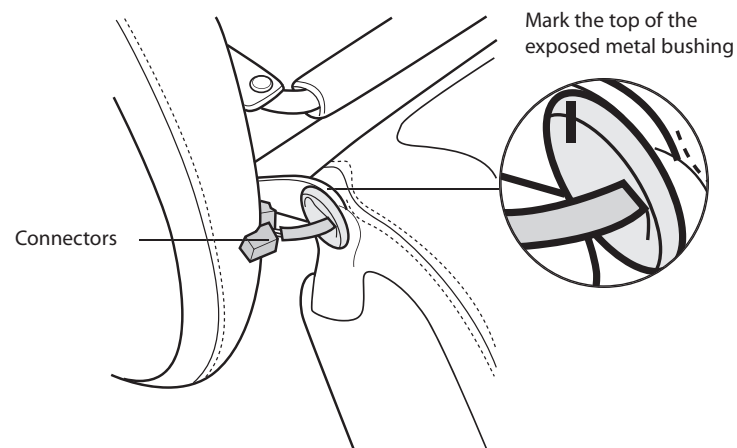

(Fig.2)

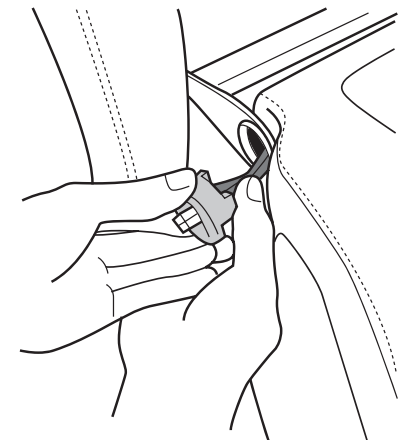

(Fig.3)

6. Place all parts removed from the right-hand side of the foot and calf massager in a separate location, so they are not mixed with the parts to be removed from the left-hand side.
7. Using a Phillips-head screwdriver, remove the screw from the left-hand foot and calf massager bracket cover, then remove the cover.
8. Using a permanent marker, mark the top of the exposed metal bushing.
9. Using a Phillips-head screwdriver, remove the three screws that secure the bushing, then remove the bushing.
10. From the front of the chair, pull the foot and calf massager toward you to remove it from the chair.

## INSTALLING THE NEW FOOT AND CALF MASSAGER

1. Place the new foot and calf massager into position, between the two mounting brackets.
2. On the right-hand side, feed the foot and calf massager connector through the foot and calf massager bracket, and then through the metal bushing.
3. Position the right-hand bushing with the mark you made earlier pointing upward, push the bushing firmly into the bracket, then secure it using three screws.
4. Connect the foot and calf massager connector to the corresponding connector on the chair.
5. Place the right-hand bracket cover into position and secure it using a screw.
6. On the left-hand side, position the bushing with the mark you made earlier pointing upward, push the bushing firmly into the bracket, then secure it using three screws.
7. Place the left-hand bracket cover into position and secure it using a screw.
8. Plug in the chair, power it on, and verify that the foot and calf massager is now working properly.