

Remote Control User Guide

Super Novo

QUICK ADJUST KEY SETTINGS – Use navigation disc to adjust:
Knead speed
Cloud Touch intensity
Foot roller speed
Massage width
Back massage intensity

TIME REMAINING – Shows the total amount of remaining time in your massage session.

MESSAGE AREA – Indicates current massage focus area.

MENU – Displays the main menu.

AUTO – Displays the Auto Programs menu. When an auto program is running, press to toggle among the other auto programs. The active program displays at the top of the status screen.

CLOUD – Press to adjust the Cloud Touch intensity. The selected intensity displays in the upper left-hand corner of the screen.

BACK – Press and hold to recline or incline the backrest.

ZeroG® – Press and hold to automatically position the chair in ZeroG mode, raising your feet above your heart for maximum spine relief.

LEGS EXTEND – Press and hold to extend the footrest.



PROGRAM NAME – indicates the current massage program.

MESSAGE MODE – indicates current massage mode.

HEAT – lights red to indicate heat is on.

STOP/POWER/RESTORE –

- Powers on the remote.
- Select STOP to stop the massage immediately.
- Select POWER OFF, then RESTORE return the chair to the upright position.

POSITION – Use to move the massage rollers to the desired position when enjoying a Zone or Spot massage.

HEAT – Press to toggle the heat on and off. When the heat is on, the heat icon on the screen displays red.

LEGS – Press and hold to raise or lower the footrest.

LEGS RETRACT – Press and hold to retract the footrest.

For more detailed operation instructions, please see the Use and Care Manual.

FAST-ACCESS CONTROLS

PERFORM KEY FUNCTIONS EFFORTLESSLY

Press then rotate outer silver knob to adjust
Sound Soothe volume only (do not use demo program)

Press to toggle heat on and off

Press to pause/reactivate all
massage functions




QUICK PRESS – powers on the chair/remote
QUICK DOUBLE PRESS – starts default auto program
LONG PRESS THEN RELEASE – restores the chair

ROTATE CLOCKWISE SLIGHTLY – stepped incline
ROTATE COUNTER-CLOCKWISE SLIGHTLY – stepped recline

Remote Control User Guide

Shoulder Height Guide

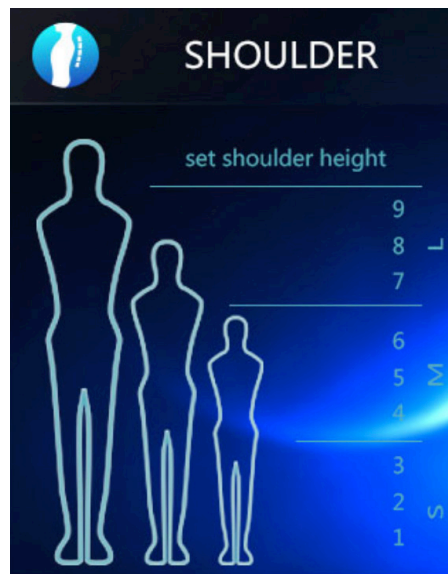

Overall Height	Shoulder Setting
5'11" > taller	8 - 9
5'8" - 5'10"	6 - 7
5'3" - 5'7"	3 - 5
5'0" - 5'2"	1 - 2

For more detailed operation instructions, please see the Use and Care Manual.