Remote Control User Guide

IJOY® TOTAL MASSAGE


HOME – Stops the massage and parks the massage rollers at the top of the backrest.

FULL BODY / SHOULDER /
LOW BACK — Three focused
auto massage programs
automatically massage you
for 15 minutes each, using a
variety of massage modes.
The corresponding LED lights
to indicate which massage
mode is currently in use.

MANUAL – Choose from three stationary massage techniques or use Glide to gently roll and massage up and down your back.

GLIDE — Choose a rolling massage on your whole back or focus your massage on a six-inch zone. Use the **position** buttons to move the massage zone to the desired position on your back.

WIDTH — Focus or diffuse massage pressure during a Glide massage. Select the width setting after selecting Glide.

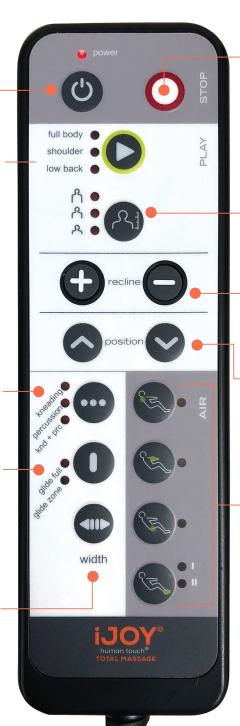

STOP – Immediately stops the massage.

RANGE – After starting a massage, select the desired vertical massage range.

POWER RECLINE – Press and hold to recline/incline the chair.

POSITION – During a manual massage, adjust the massage mechanism position to the desired location.

alR MASSAGE – Select any or all of the four air massage zones. The air massage alternates between the selected zones. You can also adjust the foot and calf massage intensity.

