

INSTALLING THE PERFECT CHAIR RECLINE LEVER GUARD

Tools Required: 4 mm (3-16") Allen Key, Phillips-head screwdriver, flat-head screwdriver.

SERVICE LEVEL: 2

SAVE ALL REMOVED PARTS FOR USE DURING REASSEMBLY

REMOVING THE ARMREST

NOTE: It is possible to install the recline lever guard without removing the armrest. However, removing the armrest is recommended.

TIP: You may want to tip the chair on its side to complete this procedure. If so, be sure to place a cushion beneath the armrest to support it, otherwise you may damage the armrest.


1. Using a 4 mm (3-16") Allen Key, from the bottom of the armrest remove the four screws that hold the armrest in place.
2. Lift the armrest upward just enough to expose the cables beneath it.
3. Disconnect the cables, then remove the armrest from the chair.

INSTALLING THE RECLINE LEVER GUARD

1. Turn the armrest upside-down
2. Using a box cutter, cut and remove a section of upholstery as shown (Fig.1).
3. Using a Phillips-head screwdriver, remove the two exposed screws.
4. Place the recline lever guard into position, aligning the screw holes (Fig.2).
5. Using a Phillips-head screwdriver, replace the screws.

REINSTALLING THE ARMREST

1. Place the armrest into position and reconnect the cables.
2. Insert and hand-tighten the screws (and their washers) that hold the armrest in place. **NOTE:** The smaller washer installs on each screw before the larger washer.
3. Tighten all screws using a 4 mm (3-16") Allen Key.

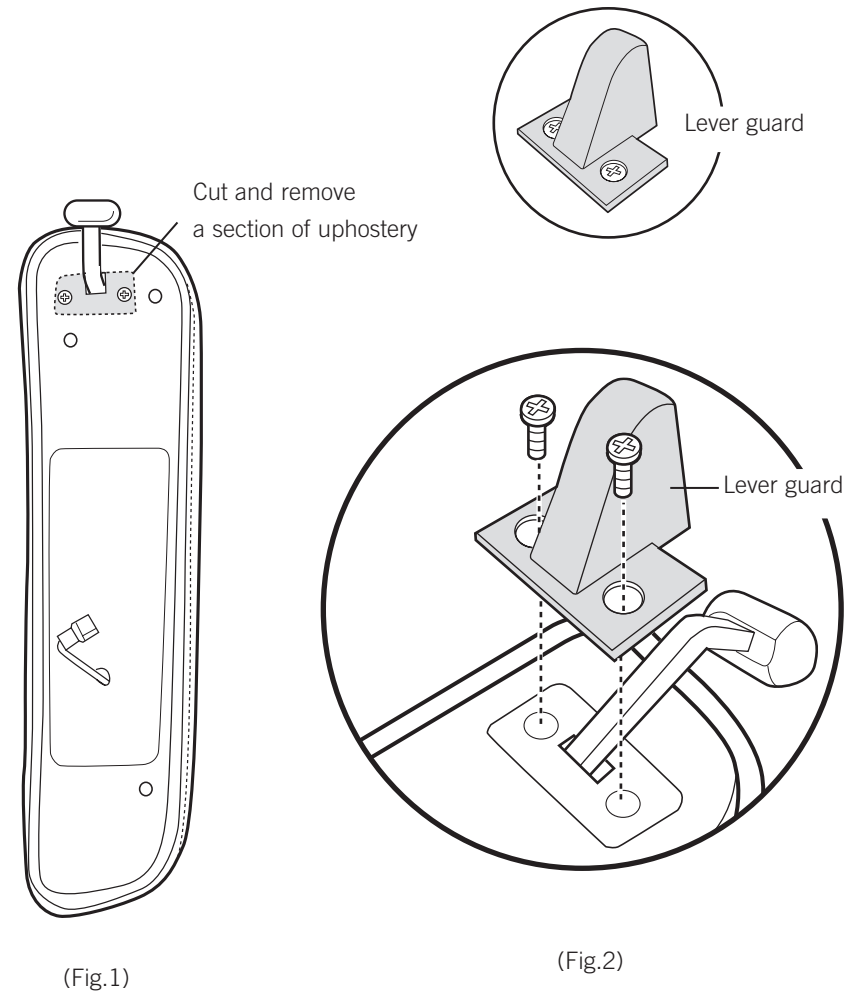

(Fig.1)

(Fig.2)