

REPLACING THE SEAT PAD

It is imperative that Human Touch® products are repaired in a manner that ensures product safety and regulatory compliance and that is fully consistent with the practices used during the manufacturing process. Therefore, Human Touch requires that all product repairs are performed using only factory-new parts and in accordance with these repair instructions. Failure to adhere to these instructions voids the product warranty and releases Human Touch from all liability for injury or product damage resulting from the repair.

SERVICE LEVEL: 2

Tools Required: Pliers. **NOTE:** SAVE ALL SCREWS FOR USE DURING REASSEMBLY.



⚠ CAUTION! You will need at least two people to complete this procedure, as the chair is very heavy. Be sure you have enough people to lift and move the chair, to prevent injury.

REMOVING THE SEAT PAD

1. Use the remote control to fully recline the chair.
2. Power off the chair and unplug it.
3. Unzip the zipper between the seat pad and the backrest (Fig.1).
4. Open the side zippers just enough to expose the hoses connecting the seat pad to the chair.
5. Push the seat cover toward the front of the chair to expose the hoses that connect to the chair (Fig.2).

Note: The hoses on the seat pad are matched with the corresponding hose on the chair base. The hoses are in sequential order. Make note of the sequence prior to disconnecting them. You will need to reconnect the hoses in the same order when replacing the seat pad.

6. Locate and disconnect the hook and loop fastener that connects the canvas on the seat pad to the canvas on the chair base. Disconnect the eight hoses connecting the seat pad to the chair base, leaving the white connectors in place.
7. Pull the hoses through the holes in both canvas pieces to separate the seat pad from the chair.
8. Lift up on the seat pad and remove it from the hook and loop fasteners.

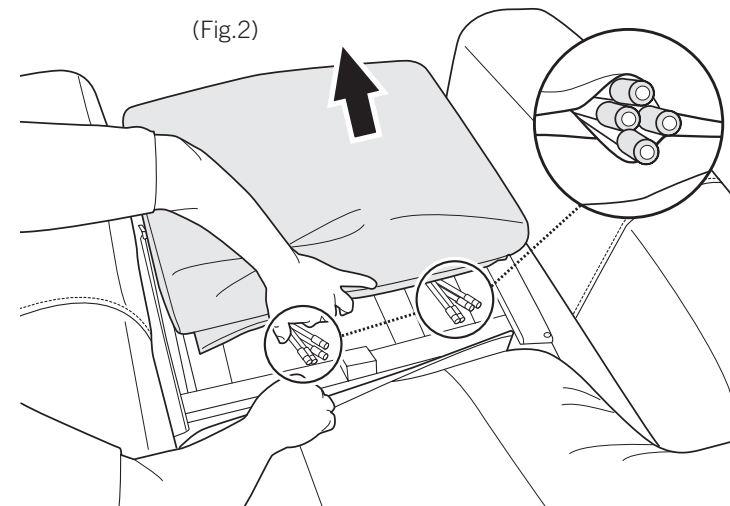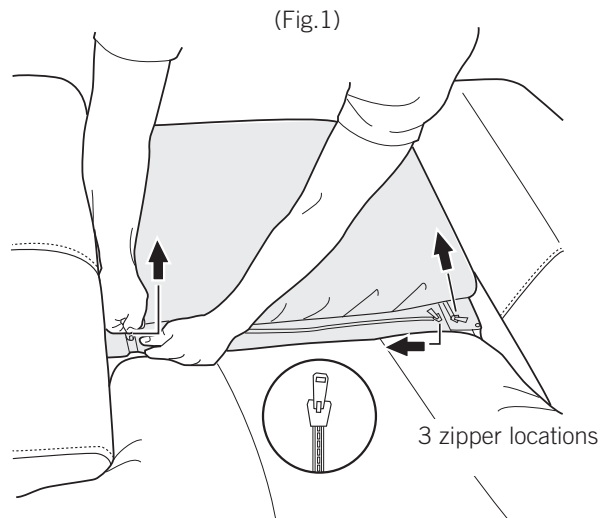

INSTALLING THE NEW SEAT PAD

1. Place the new seat pad on the seat, and line up the seat pad air hoses with the corresponding hoses on the chair base.
2. Feed the hoses through both canvas pieces (near the side zippers).
3. Re-connect the air hoses in sequential order, then tuck the hoses underneath the rear seat coil (Fig.3).
Note: The air hoses must be reconnected in the right order for the seat massage to work properly.
4. Close the two side zippers.
5. Place the seat canvas around the rear coils so the hook and loop fastener is underneath the rear coil (Fig.3).
6. Wrap the rear edge of the seat cover canvas over the coils and secure with the hook and loop fastener along the rear edge (Fig.3).
7. Close the zipper between the seat and the chair base.
8. Flip the seat pad down into position and press down firmly to secure it to the chair base using the hook and loop fasteners (Fig.4).
9. Plug in the chair and power it on.
10. Use the remote control to return the backrest to its upright position (Fig.5).
11. Test the seat pad by pressing the Seat button on the remote control, to activate the seat massage.

