



REPLACING THE POWER PANEL

To ensure that Human Touch® products are repaired in a manner that is fully consistent with the practices used during the manufacturing process, Human Touch requires that all product repairs are performed using only factory-new parts and in accordance with these product repair instructions.

SERVICE LEVEL: 2

Tools Required: Phillips-head screwdriver (provided).

NOTE: The power panel comes with the power cable and the remote control.
SAVE ALL REMOVED PARTS FOR USE DURING REASSEMBLY


REMOVING THE POWER PANEL




1. Power off the chair and unplug it.
2. Using your fingers, locate the three screws concealed beneath the power panel label (Fig.1).
3. Using a Phillips-head screwdriver, punch through the label and remove the three screws.
4. Pull the power panel out of the backrest far enough to expose the two connectors behind it.
5. Disconnect the cables and remove the power panel.

INSTALLING THE NEW POWER PANEL


1. Connect the new power panel cables to the two cables inside the mounting plate.
2. Install the power panel into the mounting plate.

 **CAUTION:** Be sure to tuck the cables completely inside the mounting plate so that they do not get pinched between the plate and the power box.

3. Replace the three screws (Fig.2), using the Phillips-head screwdriver (provided).

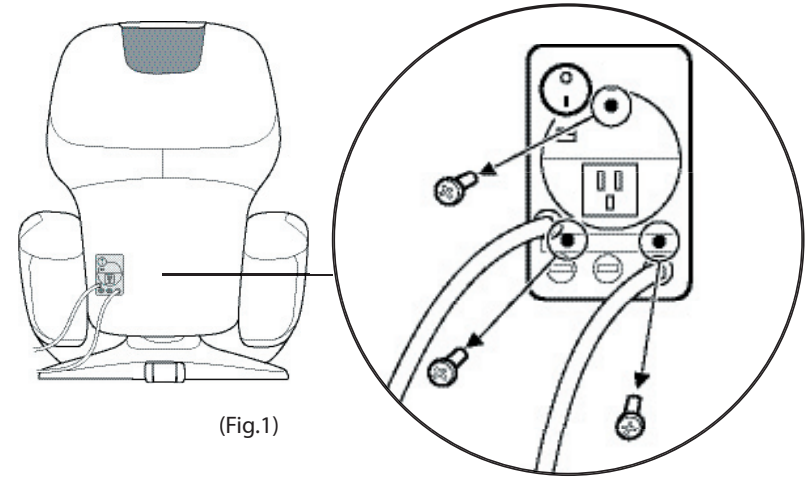

(Fig.1)

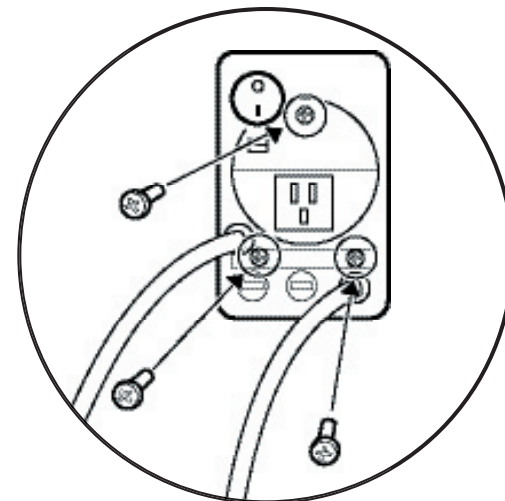

(Fig.2)