

REPLACING A FOOT AND CALF MASSAGER SIDE PANEL

To ensure that Human Touch® products are repaired in a manner that is fully consistent with the practices used during the manufacturing process, Human Touch requires that all product repairs are performed using only factory-new parts and in accordance with these product repair instructions.

SERVICE LEVEL: 2

Tools Required: Phillips-head screwdriver, flat-head screwdriver
SAVE ALL REMOVED PARTS FOR USE DURING REASSEMBLY


REMOVING THE SIDE PANEL

1. Pull up on the footrest lever, located on the right-hand side of the chair, to deploy the footrest to the position shown in Fig.1.
2. Pull up on the foot and calf massager release handle, located on the right-hand side of the massager, then rotate the massager away from the chair until the side panel cover screw is exposed on the inside of the foot and calf massager frame (Fig.1).
3. Using a Phillips-head screwdriver, remove the screw.
4. Use a flat-head screwdriver to pry the side panel cover off the foot and calf massager. This requires the use of some force, as you must break the cover away from two inaccessible screws before the side panel can be removed.

INSTALLING THE NEW SIDE PANEL

1. Position the new side panel into place.
2. Using a Phillips-head screwdriver, replace the screw you removed earlier.

NOTE: The new side panel is secured by a single screw.

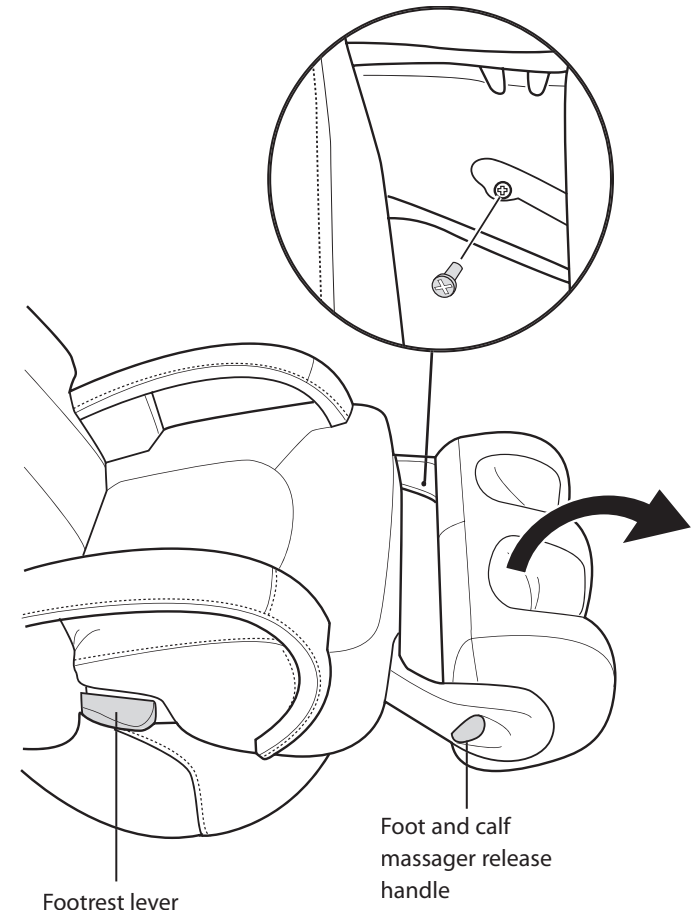

(Fig.1)