



REPLACING THE SIDE PANEL

To ensure that Human Touch® products are repaired in a manner that is fully consistent with the practices used during the manufacturing process, Human Touch requires that all product repairs are performed using only factory-new parts and in accordance with these product repair instructions.


SERVICE LEVEL: 1

Tools Required: Flat-head screwdriver.

SAVE ALL REMOVED PARTS FOR USE DURING REASSEMBLY

REMOVING THE SIDE PANEL

1. Using a flat-head screwdriver, pry the edge of the side panel outward to release it from the chair (Fig.1).
2. Using both hands, pull outward on the side panel cover to remove it from the chair base.

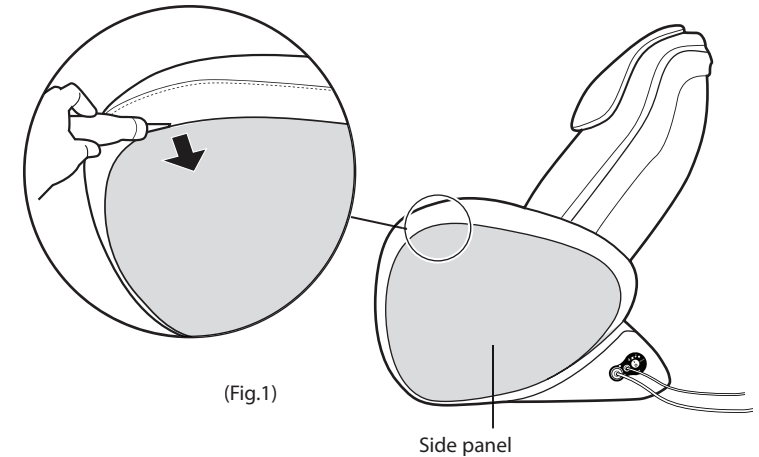

INSTALLING THE NEW SIDE PANEL

1. Align the five posts on the inside of the new side panel with the corresponding post guides on the chair (Fig.2)
2. Push the new cover firmly into place (Fig.3).

NOTE: It is helpful to install the right-hand side of the side panel first, and then the left-hand side.

