

REPLACING THE AUXILIARY POWER PANEL


To ensure that Human Touch[®] products are repaired in a manner that is fully consistent with the practices used during the manufacturing process, Human Touch requires that all product repairs are performed using only factory-new parts and in accordance with these product repair instructions.

SERVICE LEVEL: 2

Tools Required: Phillips-head screwdriver, flat-head screwdriver, utility blade, instrument suitable for cutting zip ties.

SAVE ALL REMOVED PARTS FOR USE DURING REASSEMBLY

REMOVING THE AUXILIARY POWER PANEL

1. Power off the chair then unplug it. 
2. Using a utility blade, peel the label off the auxiliary power panel, located on the right-hand side of the chair. (Fig.1).
3. Using a Phillips-head screwdriver, remove the two screws that secure the power panel to the chair (Fig.2).
4. Using a flat-head screwdriver, pry the panel out of the chair enough to expose the connectors, then disconnect the connectors (Fig.3).

IMPORTANT: Make sure the connectors do not fall into the chair frame.



(Fig.1)



Auxiliary power panel

(Fig.2)




Connectors

Auxiliary power panel

(Fig.3)

INSTALLING THE NEW AUXILIARY POWER PANEL

1. Connect the new power panel connectors to the corresponding connectors on the side of the chair (Fig.4).
2. Insert the power panel into the opening in the side of the chair, then press firmly until the power panel face plate is flush with the chair upholstery.
3. Using a Phillips-head screwdriver, replace the two screws to secure the power panel to the chair (Fig.5).
4. Carefully apply the new power panel label to the power panel, smoothing it with your fingers.

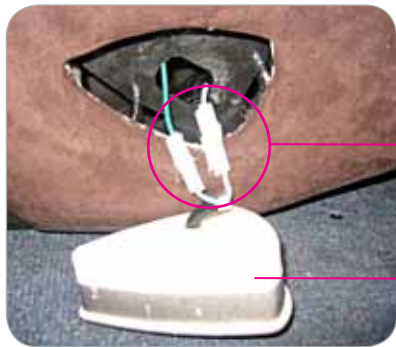

(Fig.4)

Connectors

New Auxiliary power panel



(Fig.5)

New Auxiliary power panel