



The Perfect Chair®

PC-9 Use and Care Manual



Congratulations!

You have just purchased one of the finest pieces of ergonomic furniture available. The Perfect Chair® is designed to deliver maximum seating comfort benefits, in combination with the elegant, well crafted design of a fine piece of furniture.

What makes this chair so special?
The Perfect Chair® is unlike any chair you have ever encountered, and it's what you can't see that counts.

Please take some time to review this Use & Care Manual before beginning to assemble your new Perfect Chair. We are confident that you will enjoy The Perfect Chair® for many years to come.



begin

For your safety...

DANGER

To reduce the risk of electric shock

- Always unplug chair from the electrical outlet immediately after using and before cleaning.
- Do not reach for an appliance that has fallen into water.
- Unplug immediately.

WARNING

To reduce the risk of burns, fire, electric shock or injury to persons

- An appliance should never be left unattended when plugged in.
- Unplug from outlet when not in use, and before putting on or taking off parts.
- Close supervision is necessary when this appliance is used by, on, or near children, invalids, or disabled persons.
- Use this appliance only for its intended use as described in this manual.
- Do not use attachments not recommended by the manufacturer.
- Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water. Return the appliance to a service center for examination and repair.
- Always keep the power cord away from heated surfaces.
- Never operate the appliance with the air openings blocked. Keep the air openings free of lint, hair, and the like.
- Never drop or insert any object into any opening.
- Do not use outdoors.

- Do not operate where aerosol (spray) products are being used or where oxygen is being administered.
- To disconnect, turn all controls to the OFF position, then remove plug from outlet.
- Do not use chair when standing on a damp floor, or when any part of the body is in contact with plumbing or any similar ground.
- Do not use unit if noise above normal sound is heard.
- The unit is designed for personal in-home use. Commercial use will void warranty.

- Do not change the plug in any way.

SAVE THESE INSTRUCTIONS

IMPORTANT SAFETY INSTRUCTIONS

Read all instructions before using the chair.

WARNING

Do not put hands or fingers near the recline mechanism or rollers while the chair is running. Touching the mechanism can result in injury from the rollers.

Ergonomic Features

- Electric seat positioning system simplifies getting in and out of The Perfect Chair®.
- Finger tip electric recline release control is effortless to use.
- Reclines to a physician-recommended position for pressure relief for the spine.
- The fixed form of the seating position ensures the most ergonomically beneficial posture, at all reclining angles.
- The Perfect Chair® comes with an Adjustable Cervical / Lumbar Pillow that can be used as either a headrest pillow or a lumbar pillow.
- The Adjustable Headrest feature allows you to customize the angle of the headrest of the Perfect Chair® to maximize head support while you are reading or watching television.

4



review

Design Features


- Architecturally designed to complement any room decor.
- Rugged steel frame to ensure your Perfect Chair® lasts for years.
- Engineered with ball-bearing recline system for smooth, quiet operation.
- Single apparatus electric recline control is unobtrusive, easy to access, and requires no effort to engage.

Before Using The Perfect Chair

The Perfect Chair® is designed to be used by just about anyone, and if treated like any other fine piece of furniture, it will last for years. However, there are situations where improper use or care might cause damage to the product. Specifically, please note the following:

- The chair is designed for individual use and for body weights under 285 lbs.
- Do not sit on the chair arms under any circumstances.
- The chair is intended for stationary use, not for rocking.
- Keep fingers and loose clothing away from the guide rails at all times.
- This product is not designed for use by disabled people or children without adult supervision.

5

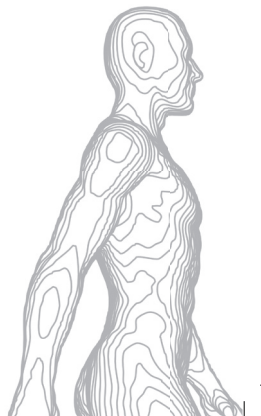

proceed

The Perfect Chair® Assembly Instructions



6

Head Frame

1A Remove 2 retaining screws from the tapered ends of the Head Frame. Save screws to reinstall. Insert tips of Head Frame into open ends of upper chair frame taking care to face bowed cross member outward. Using a Phillips screwdriver re-install 2 retaining screws previously saved.



Arm Core

2A Remove packaged machine screws taped to the top of the right hand Arm Mounting Plate. Save screws to install. Place the single right hand Arm Core on the Arm Mounting Plate. Secure from the underside of the Arm Mounting Plate with the 4 machine screws previously saved. **TIGHTEN SECURELY.**



Arm Caps

3A Remove packaged wood screws taped to underside of each upholstered Arm Cap. Slip left and right Arm Caps over the Arm Cores and secure from the bottom with 3 wood screws on each arm.



7

Please follow these step-by-step assembly instructions to enjoy the full benefit of the precision that is built into your new Perfect Chair®.

The Perfect Chair® Assembly Instructions (continued)

Body Pad

- 4A** Slip foot pocket located on underside of Body Pad over the ends of the Foot Frame. Be sure that both tips of the Foot Frame are firmly seated all the way into the bottom of the pocket.



- 4B** Align Body Pad in the center of the chair. Using your hands, smooth the pad from the foot end to the shoulder end. Mating hook and loop patches will automatically align to secure the pad in-place.



Head Sock

- 5A** Slide head sock over head frame and pull firmly downward as far as it will slide.



Head Pad

- 6A** Slide Head Pad over installed Head Sock seating it firmly against the top edge of the Body Pad.



- 6B** Reach into seam between the Head Pad and the Body Sock and pull out the connecting tongue flap from the backside of Body Pad.



- 6C** Tuck connecting tongue flap up into pocket behind Head Pad and smooth flat with your hand.



Neck Pillow

- 7A** Secure height adjustable Cervical/Lumbar Pillow at a desirable height by mating hook and loop tails with hook and loop straps.



Head Pillow

- 8A** Secure optional, height adjustable Lumbar/Head Pillow at a desirable height by mating hook and loop tails with hook and loop straps (Optional Adjustable Lumbar/Head Pillow not supplied with all models).



Using The Perfect Chair®

To ensure maximum enjoyment of The Perfect Chair®, please follow these instructions:

Prepare the Chair

Before sitting down, plug the chair into a power source and check to be sure the chair is in the complete upright position:

1. Press down gently on the control lever until the chair automatically stops in the full upright position.
2. Now you are ready to sit down in your Perfect Chair®.



Adjust Recline Backward

Before adjusting recline angle, be sure that there is nothing behind or beneath the chair.

1. While seated, pull up gently on the control lever and the chair will begin to recline.
2. Release the control lever when you reach a desired angle.
3. The recline motion will automatically stop when you reach the maximum recline angle.

Adjust Incline Forward

Before adjusting incline angle, be sure that there is nothing behind or beneath the chair.

1. While seated, press down gently on the control lever and the chair will begin to incline forward.
2. Release the control lever when you reach a desired angle.
3. The incline motion will automatically stop when you reach the full upright angle.


Getting Out of the Perfect Chair

1. While seated, press down gently to start the chair inclining forward.
2. Release the control lever when the chair automatically stops at the full upright position.
3. When you are ready to exit the chair, use the armrests for support to stand.

Adjusting the Head Rest


The Perfect Chair® adjustable Headrest feature provides for comfortable support of your head at an optimum angle while reading, conversing, or watching television:

1. While seated in the chair reach up with both hands and grasp both sides of the Head rest Pad and internal Frame.
2. You will feel the rigid internal Frame beneath the soft layer of the Head Pad.
3. Apply your grip to the rigid internal Frame and tilt the Head Rest forward or backward to suit your comfort needs.
4. The Head Rest has been engineered to stay in the position you set until you choose to move it again.

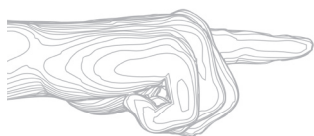

learn

enjoy

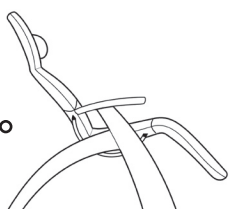

Using the Adjustable Headrest / Lumbar Pillow

The Optional Headrest / Lumbar Pillow is included with some models of the Perfect Chair®.

USING THE ADJUSTABLE HEADREST LUMBAR PILLOW

This healthful pillow can be attached to the suspension straps at the top of the chair or can be placed anywhere you need custom tailored support. The surface contours of the pillow are perfectly matched to your body with fingertip control.

Adjustable Headrest Application

- Mount the adjustable pillow at the head of your Perfect Chair and custom form it to cradle your head for total relaxation. Suspension straps built into the Pillow are designed to connect to the Pillow mounting straps built into the Perfect Chair.



Adjustable Lumbar Application

- Tuck the pillow behind the comfort critical lower lumbar curve in your back. With fingertip control you can direct the pillow to conform to your unique contours. Suspension straps used for the Headrest Application are neatly managed with discrete, built in hook and loop surfaces.



To purchase the Adjustable Headrest / Lumbar Pillow, please contact Interactive Health Customer Service. Call (800) 355-2762 9:00AM and 5:00PM PST for assistance, or email cs@interhealth.com.

FORMING THE PILLOW TO YOUR BODY

To adjust the pillow for your optimal comfort, please follow these instructions:

Decrease Pillow Thickness

- To decrease the thickness of the pillow, push on the ball valve while applying pressure to the pillow face. The pillow will automatically conform to your body at a reduced thickness. When the pillow has reached the desired thickness, release the valve to freeze the pillow in its new compressed form.



Increase Pillow Thickness

- To increase the thickness of the pillow, lean completely away (off) from the pillow and push in the ball valve. As the pillow expands the form will adjust to a new increased thickness. It will take approximately 10 seconds for the pillow to reach full thickness. Releasing the valve at any time will freeze the pillow in its new expanded form.

PILLOW PERFORMANCE NOTES

- It is necessary to remove any body weight (completely lean away) from the pillow when re-inflating it.
- If the pillow has been compressed for a long period of time, it will take up to a minute to re-inflate it (foam "memory" will restore itself).
- The colder the pillow is, the slower the foam will react to form changes (inflation).
- Should the valve leak after an extended period of use, push the black ball in and with a cotton swab apply a small amount of Vaseline inside the valve.
- The pillow contains a precision air tight bladder. Pushing any sharp object through the pillow will puncture the bladder causing the pillow to fail.

Perfect Chair® Care

Keeping your chair in great condition is easy.

MOVING YOUR CHAIR

If you want to move your chair to a different location, be sure to do the following:

- Have another person assist you.
- Position the chair in the fully reclined position before moving.
- Lift the chair from the base, not the armrests or suspension system.

BEAUTY CARE

Use the following tips for keeping your chair at its best:

- Avoid placing the chair in direct sunlight or extreme weather conditions.
- Use water-based cleaners only.
- On wood, use household wood polish or cleaner.

MECHANICAL MAINTENANCE

The Electric Perfect Chair requires no mechanical maintenance:

- The recline screw drive located under the chair should not be handled or lubricated. It has been prepared at the factory for lifelong lubrication and trouble free performance.

Perfect Chair® Options

Comfort and Accessory options engineered to enhance the Zero Gravity Experience.

COMFORT OPTIONS

Upgrade to supreme relaxation:

- Adjustable Headrest / Lumbar Pillow
- Memory Foam
- Footrest Extension

ACCESSORY OPTIONS


Extend the Perfect Chair presence into your interior environment:

- Integrated Personal Table
- Integrated Ganging Tables
- Leather Back Cover


LEARN MORE ABOUT PERFECT CHAIR OPTIONS

Learn more about the whole line of Perfect Chair options and accessories.

- Visit the Interactive Health Perfect Chair web site at www.perfectchair.com.
- Contact Interactive Health Customer Service.
Call (800) 355-2762 9:00AM to 5:00PM PST for assistance
- Email Interactive Health: cs@interhealth.com.



care



options

The Perfect Chair® Limited Three (3) Year Warranty

Please read the following warranty information for important disclosures before using The Perfect Chair®.

We are pleased to let you know that The Perfect Chair® by Interactive Health, that you purchased comes with a limited three-year warranty. The warranty provides peace of mind that you are covered for mechanical or structural defects in workmanship within the coverage guidelines and limitations outlined below.

Coverage Guidelines:
The warranty begins on the original purchase date and consists of:

- Factory Service (Labor): Interactive Health will supply packing materials, cover return shipping to Interactive Health, repair parts covered by this warranty and labor for repair work and return shipping to purchaser when repairs are completed.
- Parts Only (Parts): Interactive Health will supply repair parts that are covered by this warranty and return shipping to purchaser for repairs performed at the factory.
- Structural (Metal Frame Only): Interactive Health will supply packing materials and repair parts covered by this warranty and return shipping to purchaser for repairs performed at the factory.

The Perfect Chair®	Factory Service	Parts	Structural
New Products (Original Packaging Only)	90 days	3 years	3 years
Refurbished Products	60 days	6 months	6 months
Floor Demos (including "out of box")	NONE	6 months	6 months

In the unlikely event that your chair malfunctions or requires repair, please contact Interactive Health Customer Service at (800) 355-2762 or cs@interhealth.com between the hours of 9:00AM and 5:00PM PST for assistance.


All warranty service requires approval and authorization by Interactive Health. Products require a Return Merchandise Authorization Number (RMA) for any returns to the factory. For returns, the consumer is responsible for packing the product in the original box or in approved packaging that is available for sale from Interactive Health. Shipping and freight coverage under this warranty requires scheduling by Interactive Health and only includes "curb-side" pickup/delivery. Products received without a valid RMA number or one clearly marked on the box will be refused.

General Limitations:

- The warranty is only valid within the United States and Canada provided the product has been operated according to the instructions accompanying it and has not been misused or damaged in any way that is beyond the control of Interactive Health.
- All service covered by this warranty must be approved by Interactive Health and repairs performed by authorized technicians.
- The warranty applies only to The Perfect Chair®; accessories or enhancements are not covered.
- Important exclusions apply to cosmetic items such as fabrics, woods, foams, padding, plastics covers, etc.
- Interactive Health is not responsible in any way for losses, damages, or inconvenience caused by equipment failure.
- For a complete listing of warranty coverage, exclusions, and limitations, visit www.interhealth.com.
- Proof of purchase (original receipt) is required for all warranty repairs.

© Interactive Health®, 2004
No medical claims warranted or implied by the use of this product.

longevity

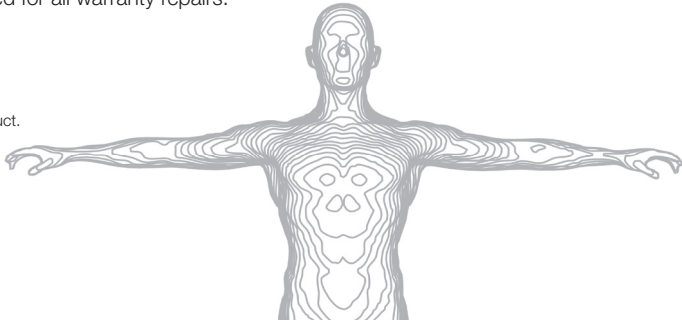

Specification:

Operating Voltage: 220 - 230 VAC 50HZ 150 Watt (max)